


PPE Cold Air Intake

for the 2000+ Toyota MR2 Spyder

Installation Manual

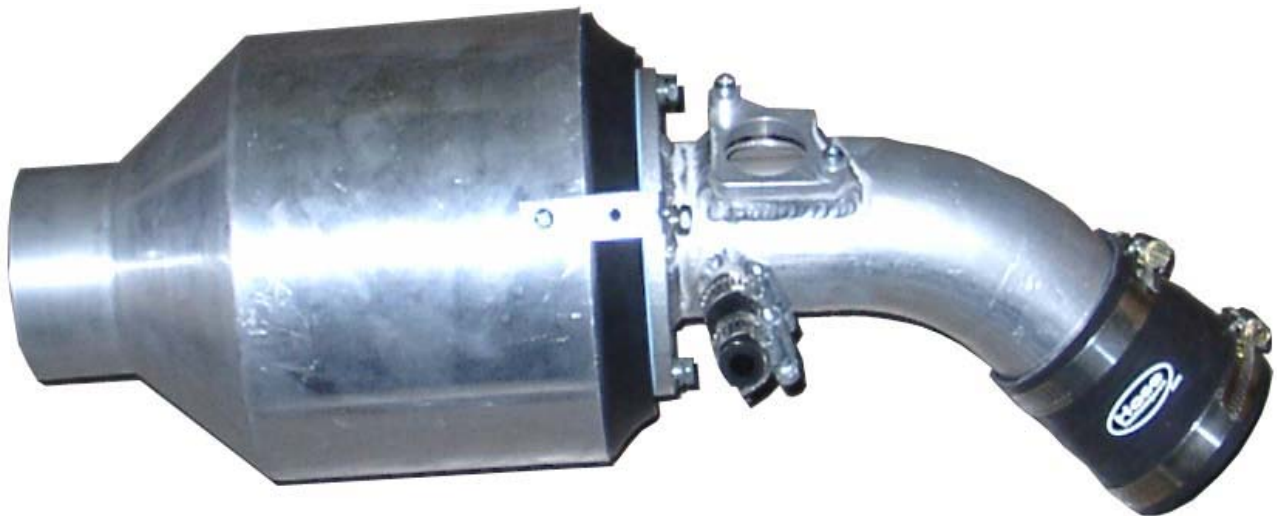

PPE Engineering, LLC
www.ppeengineering.com
sales@ppeengineering.com
330 E. Southern Ave. #6
Mesa, AZ 85210

Pre-Installation:

1. Remove upper engine brace.
2. Remove stock intake box, intake pipe and throttle body hose.
3. Remove MAS from intake box.
4. Remove battery.
5. Remove battery tray.
6. Disconnect wiring harness from bracket on firewall.

Installation:

1. Install MAS into PPE intake pipe using the screws provided.
2. Attach the emissions solenoid valve to the PPE Intake pipe with the 10mm silicone hose and clamps. (cap off 1/2" pipe if you do not have the emissions solenoid valve)
3. Install PPE CAI to throttle body with the silicone hose transition.
4. Tighten all hose clamps when the intake is in the desired position.
5. Plug in the MAS and solenoid valve (attache vacuum hose to Solenoid valve)

Post-Installation:

1. Install battery tray.
2. Install battery.